

SECURITY LOCK WITH CODE

Because more than 90% of stolen laptops and tablets are never recovered...

Consider securing your equipment and your most sensitive data with MOBILIS[®] locks and cables. The only effective solution against theft is prevention!



UNIVERSAL SECURITY LOCK - CODE FOR NANO[®] / WEDGE[®] / T-LOCK[®] SLOTS Ref. 001379

PRODUCT



FEATURES



COMPOSITION

Steel cable.
Composed of 7 strands.

RESISTANCE

1 tonne.

LENGHT

1.8m, diameter 4mm.

SWIVEL CABLE

Easy installation.

ULTRA-THIN CABLE HEAD

Ideal for the thinnest devices.

VERSATILE

3-in-1 notches
NANO[®] / WEDGE[®] / T LOCK[®]

4-DIGIT CODE

Customisable code.



SPECIFICATIONS

Ref	Product	EAN code
001379	Universal Security Cable - Nano / Wedge / T Lock - Rotating Head - Code	3700992532523

ASSEMBLY INSTRUCTION

PRECAUTION

Read all instructions carefully and examine the visuals before proceeding with installation.

SECURITY LOCK INSTALLATION



STEP 1:
Place the dials to the preset opening combination: 0-0-0-0.



STEP 2:
Insert a screwdriver into the reset button and turn it 90° clockwise.



STEP 3:
Set your new 4-digit secret code combination.



STEP 4:
Insert the screwdriver into the reset button and turn it 90° counterclockwise.




STEP 5:
Pinch the push button between your index finger and thumb, and insert the head into the safety notch.




STEP 6:
The cable head automatically fits into your device's notch.

- WEDGE[®]
- NANO[®]
- T-LOCK[®]


The different notches

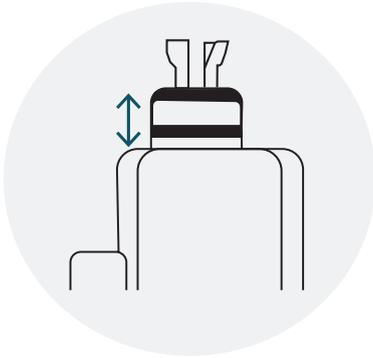

For the WEDGE[®] notch: press the button; the two black lines should be visible.

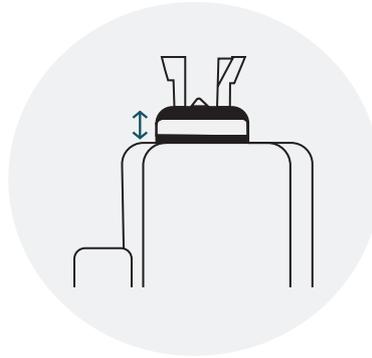

For the NANO[®] notch: press the button and push the lock inwards to the position of the first black line.

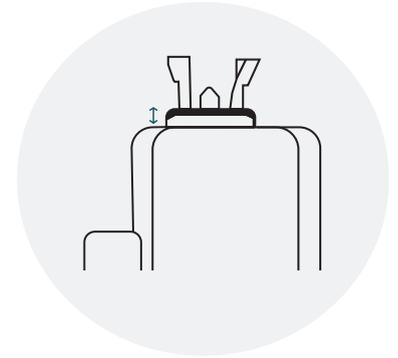

For the T-LOCK[®] notch: press the button and push the lock until only the last black line is visible.



STEP 7:

Release the button and mix the numbers of the secret code to lock the security cable. The lock is now activated.